



HONYA CO., LTD
www.reefoctopus.com



OCTO pulse

Instruction Manual

OP-2

OP-4



Dear Customer

Thank you for choosing OCTO, a quality product manufactured by HONYA CO., LTD. In order for you to safely use our product for maximum results, please read the instruction prior to use. We would strongly suggest that you retain this Instruction for future reference.

Safety on Magnet

- **CAUTION**-Extremely Strong Magnets, please handle with care.
- Keep magnets out of reach of children
- Do not snap both magnets together directly
- Keep the magnets away from electronics products and magnetic storage devices such as credit cards, pacemaker etc.

Notes

- Never handle any Electrical Component when your hands are wet.
- Ensure that all components (Power Adapter, Controller, Wires, etc) are properly set –up to prevent accidental damage
- For Indoor use ONLY.
- For Controller operation, please refer to the instructions as per this manual.
- Keep Controller Cool and Dry, do not expose to Direct Sunlight or Heat.
- Pump Protection System – if pump is detected to be running dry, it will stop operating after about a minute. To restart the Pump, off the power, re-position the pump to ensure that it is submerge in the water then turn on the power.
- Should in the unlikely event that your pump stop working, please refer to the Trouble Shooting page in this manual.
- Please maintain your pump as per this manual.

Overview

- Introducing our new OCTO series Direct Current (DC) Wave Pump, OCTO Pulse features a Multiple Angle Adjustment, an all new controller with a 0-10V port, 4 pre-program pulsing patterns, high quality ceramic shaft and bearing to reduce wear and tear, and the latest variable speeds flow technology for refined control, enhanced performance, energy-efficiency and safer operations.
- With the bespoke controller, users have full control over the flow rates by selecting amongst eight preset speed settings; indicated by eight LEDs. A 15 or 60 minutes feed mode can also be engaged or disengaged with the push of a button.

Features & Benefits

- 360° Range of Adjustment
- Low-profile Magnetic Mount
- Strong Rare-earth Magnet Impeller
- Compact & Durable Construction
- Silent operation
- 4 Preprogrammed Flow Patterns
- Dual Feed Mode - 15 or 60 min
- 0-10v External Controller Connection

Product Specification

OCTO Pulse Wave Pump										
Item #	Product	Max Flow Rate		Power	Tank Water Volume		Suggested Tank size		Max Wall Thickness	
		LPH	GPH		L	US GAL	cm	in	mm	in
110401	OP-2	6000	1585	5-10	80-300	21-80	40-100	16-40	12	1/2
110402	OP-4	17000	4490	11-32	300-1800	80-475	100-180	40-71	15	5/8


Flow Rate Charts

Step	OP-2		
	Flow Rate		
	Power W	LPH	GPH
1	5.0	3200	845
2	6.0	3800	1000
3	6.5	4050	1070
4	7.0	4450	1170
5	7.5	4720	1250
6	8.5	5100	1350
7	9.5	5820	1540
8	10.0	6000	1585

Step	OP-4		
	Flow Rate		
	Power W	LPH	GPH
1	11	5360	1410
2	14	7900	2080
3	17	9600	2530
4	20	11300	2980
5	22	12400	3270
6	25	14100	3720
7	28	15900	4200
8	32	17000	4490

Package

Please check the content in the package

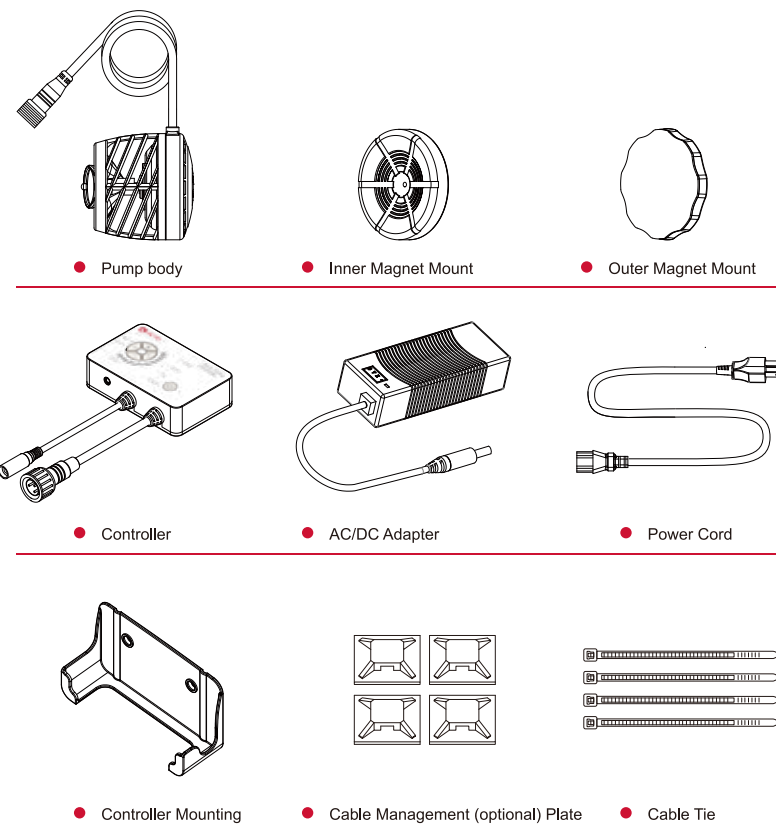

Attention:

DC24V /1.0A (AC/DC Adapter) suitable for OP-2

DC24V /2.5A (AC/DC Adapter) suitable for OP-4

Installation



1




2



3



4

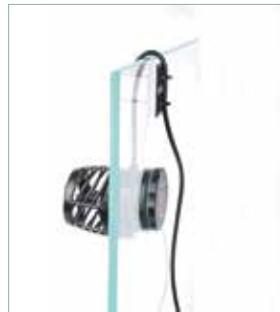

5



6

- Slide the Inner and Outer Magnet into your desired position(image 1/2). DO NOT Snap both Magnets together.
- Mount the Pump to the Inner Magnet, ensuring that the power cable is on top (image 3/4).
- Tie the cord to the Cable Management Plate using a Cable Tie. Do not tighten the Cable Tie till confirmation of Pump Position. Ensure to have some allowance for final adjustment of pump position before cutting off the excess Cable Tie.




7



8


- Adjust angles according to your requirements(image 7/8).

Connections as per below diagram. OCTO Pulse system has a built-in safety mechanism. Make sure all cables are connected(1 and 2), mount the controller before turning on the power(3)

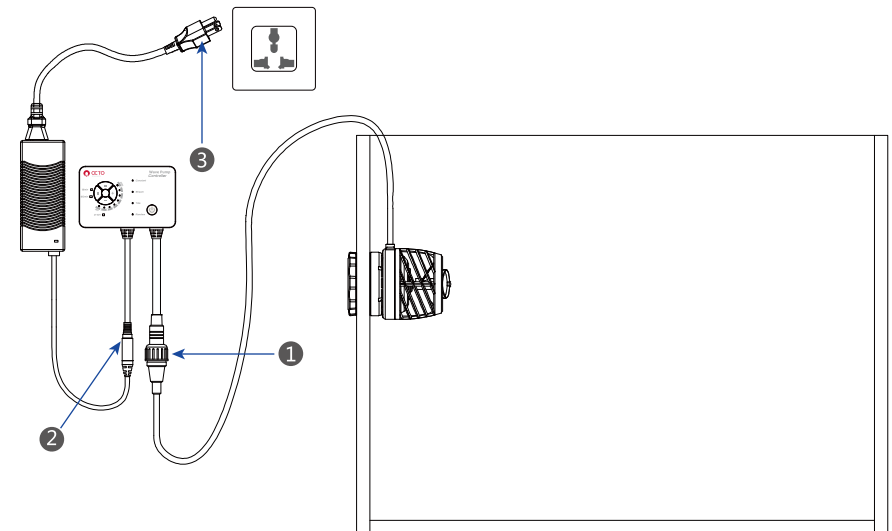

Attention: Before starting the pump, please ensure that livestock are not near the pump.

Quick Start Guide

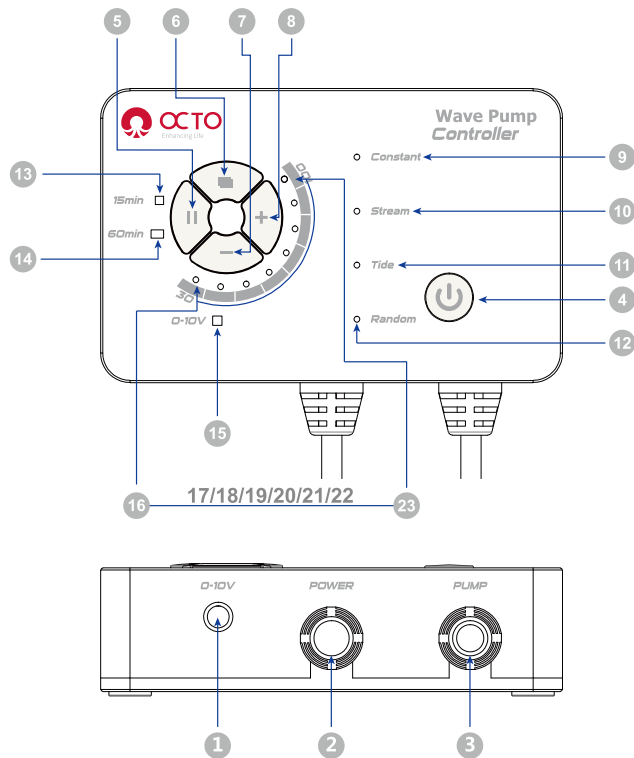

Legend

- 1 0-10V Input (3.5mm TRS Audio port)
- 2 Power supply Connection (DC24V)
- 3 Connection for OCTO Pulse Wave Pump

Press

- 4 Power ON Switch – press once to toggle unit On/Off. During “Pause” function, press once to cancel “pause” function
- 5 Pause function – 15mins or 60mins options. Press once for 15mins and twice for 60mins “pause” function. Once set, lights indication (13 or 14) will be lighted.
- 6 Press 6(⏏) for Wave Mode Selection. Continue Pressing will select the desired modes.
 - 9 Constant
 - 10 Stream
 - 11 Tide
 - 12 Random
- 7—8 Flow Rate Controller for Wave Pump “+” and “-” to adjust desired flow rate

Lights Status Monitor

- 15 0-10V light “on” = 0-10V connected
- 16—23 8 Steps Flow Rate Indicator Lights

Attention:

- 1 When using 0-10V to control DC Pump, flow rate will not be indicated on the 8 Steps Flow Rate Indicator.
- 2 For Constant Flow Mode, adjustment for maximum and minimum flow rate is possible. For the other Flow Modes, you can only adjust the maximum flow (indicated RED line) to a lower rate, as the minimum flow rates are prefix. See the attached flow rate charts.

0-10V Wiring diagram:




Wave Mode flow pattrens

• Constant Flow Mode




Speed: Flow rate can be adjusted via (7 or 8)

• Tide Flow Mode

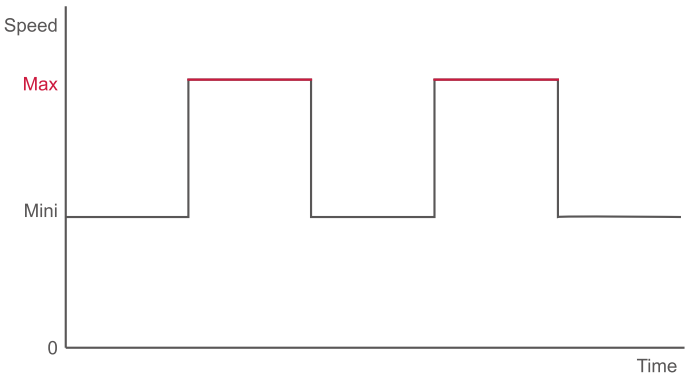


Max Speed: Flow rate can be adjusted via (7 or 8)

• Stream Flow Mode

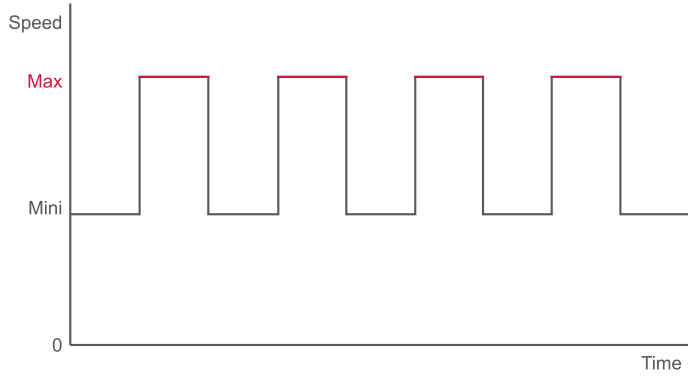

Max Speed: Flow rate can be adjusted via (7 or 8)

• Random Function Mode

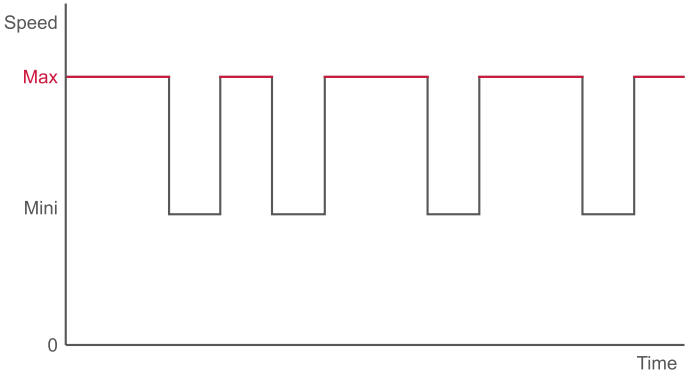


Random Mode will randomly select Constant/Stream/Tide

Max Speed: Flow rate can be adjusted via (7 or 8)

Dismantling and Maintenance



1

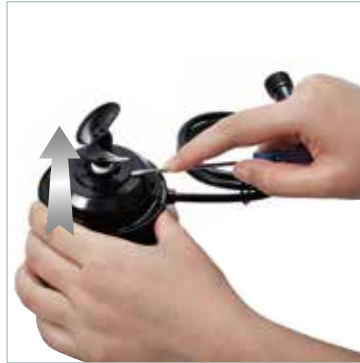


2




3




4

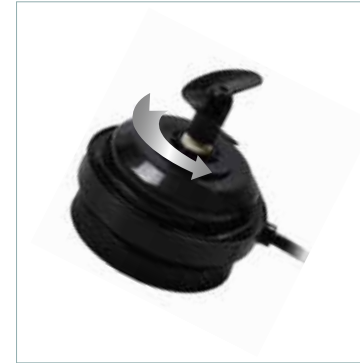

5

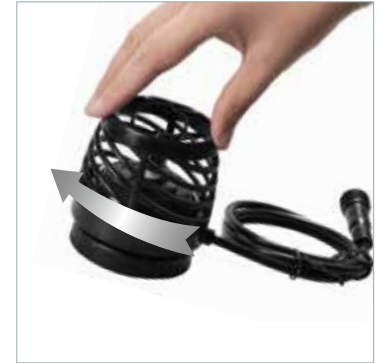

6

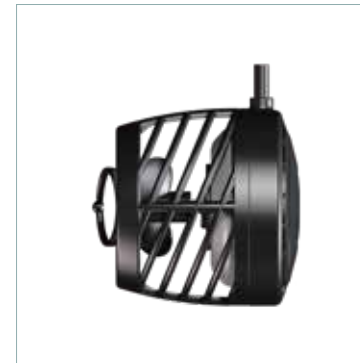

7

- Turn Pump Cover Anti-Clockwise to remove cover (image 1)
- Use a Flat Tip Screwdriver to remove the impeller plate (image 2/3)
- Wash with fresh water.
- Snap Back the impeller cover plate evenly (image 4)

- Ensure that impeller is running smoothly before use (image 5)

Trouble Shooting

17-22 Indicator Lights Blinking	Pump Protection System Activated. Ensure pump is submerge into the water before continue operating.
	Slipping Impeller- change Impeller (wear and tear)
Both 13 & 14 Indicator Lights Blinking	Turn Off the Device and Check all connections
	Open up the Impeller Cover Plate to make sure no foreign objects is stuck within.
	Ensure that Impeller is in place and free spinning

Warranty

Dear Customer,

Thank you for choosing OCTO, a quality product manufactured by HONYA CO.,LTD. your product shall be under warranty against defects of material and workmanship under the Terms and Conditions. HONYA CO.,LTD warrants your products against defects in MATERIAL and WORKMANSHIP , for the period of warranty. During the warranty period, this product will be repaired or replaced without charge (excluding incidentals), at the sole discretion of HONYA CO.,LTD.

1. in the unlikely event that servicing of your product is required during the warranty period, kindly bring the product to one of our Authorised Dealer where you purchased the product from, with Proof of Purchase and this Warranty Card. Without the Proof of Purchase , the warranty period will be determined by the product serial number at the sole discretion of HONYA CO.,LTD.
2. Warranty excludes and does not cover any Damage, Loss, Malfunction, Defect or other issues arising from or related to:
 - 2.1. Inappropriate or improper installation, set-up or use, as according in the User's Manual,
 - 2.2. Any repair/modification by any person not authorised and approved by HONYA CO., LTD,
 - 2.3. Any consumables or moving parts due to normal wear and tear (e.g. O Ring, Sealing Sing, Impeller)
 - 2.4. Negligence, Accidents or Mishandling,
 - 2.5. Transportation or Shipping,
 - 2.6. Natural or Man-Made disasters,
 - 2.7. Corrosion, electrical surge, power failure
3. The warranty extends only to products purchased from HONYA CO., LTD through our Official Authorised Dealers.
4. HONYA CO., LTD is not liable for any direct or indirect, special, incidental, punitive, exemplary, consequential or economic damage or loss arising from the use of our products or related to the warranty.
5. HONYA CO., LTD liability under or in relation to the warranty is limited to the cost of replacing the product with the same or an equivalent product, or of repairing the product, whichever is lower
6. HONYA CO., LTD reserves all rights to the final interpretation and amendment (without prior notice) of the terms and conditions in this warranty card.

1 Year Warranty

All Skimmer, Reactor Body, DC Pump Adapter and Control Module,Aquarium Tank and Furniture.

Pumps – OTP Pumps

2 Years Warranty

Pumps - AQ, HY, DC

HONYA CO., LTD is committed to continuous product development, we hereby reserve the right to revise the product specifications or designs without prior notice.

For any further enquiry/assistance and latest product updates, kindly send us an email with your contact details at info@reefoctopus.com.